August International Ltd
United Kingdom
Telephone:845 250 0586
www.augustint.com

August®

User Manual

7 Inch Digital & Analogue LCD TV

DA701C

User Manual

Thank you for buying our August TV. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions **before** you use this product.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Customer Service:

If you need help, please contact our Customer Service:
Telephone: +44 (0) 845 250 0586
Email: service@augustint.com

Quick Start Guide

DA701C

1. It is suggested that you use a roof top aerial when scanning for TV channels for the first time, if any signal is detected, the channel information will be saved on the TV, you may then switch back to the portable antenna supplied and change your location to find the best place to receive the signal.

2. Connect the device to the mains power, turn the power switch on the side of the TV to ON, a red standby light will show, press POWER on the remote or TV to turn on the device.

3. The TV/AV button on the TV and MODE on the remote are for switching between Digital Freeview TV & Media Player and Analogue TV modes.

4. When turning on the device for the first time, "Initial Install" will show, follow the instructions to select OSD Language and Area, then press ENTER, it will ask whether to install, select YES, the auto search will then start. Once the search has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

5. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to scan channels again, press TV/AV on the TV or MODE on the remote to switch to Digital TV & Media Player mode, press MENU, select "Digital TV" by pressing ENTER, select "Installation", then select "Auto Search", press ENTER to start the search. Once the search has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

6. To search for Analogue TV, press TV/AV on the TV or MODE on the remote to switch to Analogue TV mode and you should see either "AUTO", "PAL" or "SECAM" at the top right corner of the screen. Press MENU repeatedly, it gives you menu "PICTURE", "VOLUME", "OPTION', "SYSTEM", "PRESET", and "CLOCK" respectively. To start the auto search, move to "PRESET" menu and "AUTO SEARCH" is selected, press RIGHT to start search for channels.

7. To play video, music, or photos on a SD card or memory stick, insert the SD card or memory stick to the card slot or USB port, press TV/AV on the TV or MODE on the remote to switch to Digital TV & Media Player mode, press MENU to select “Movie”, “Music”, or “Photo”, press ENTER or PLAY to start playing, press EXIT to stop and exit to main menu. During the photo playback, press UP for the mirror effect, press again to back to normal, press DOWN for upside down effect, press again to back to normal, press RIGHT to rotate clockwise, press LEFT to rotate anticlockwise, press ENTER for photo slideshow, photos in the selected folder will show repeatedly.

8. Please note the included portable antenna may only be used in areas where signal is very strong. There may be difficulties in receiving signal with the portable antenna in some regions at present, this is due to the fact that Freeview (www.freeview.co.uk) is yet to operate in full power in the UK. The government aims to achieve a full switchover by 2012, which will occur in stages, region by region between 2008 and 2012, at present the quality of Freeview reception varies in different regions across the UK.

   As mentioned on the Freeview website, only 73% of the UK population is able to receive Freeview at present and only a small number of households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception.

   The reception will be improving along with the progress of the Digital Switchover Program. Reception may also be affected by various factors such as how close you are to transmitters, tall buildings, thick walls, ceilings and weather etc.

9. For any further queries, please telephone August International Ltd helpline 0845 250 0586 or email service@augustint.com

Contents

1.Safety Instructions 1

2.Accessories 3

3.Part Names and Functions 4

4.Remote Control 6

5.Connections 8

6.Digital Freeview TV (DVB-T) 9

7. Digital TV Recording 16

8.Card Reader & USB Functions 17

9.Games 18

10.Screen Setting 19

11.Analogue TV 20

12.Battery Charging 23

13.Troubleshooting 24

14. Specifications 25

15.Warranty 26

1. Safety Instructions

Storage and Use

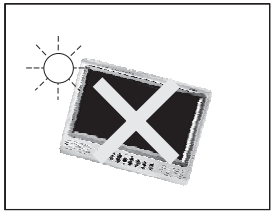

Keep this machine away from hot or cold places. The storage temperature of this machine is -20~ 60℃, the application temperature of this machine is 5~ 35℃.

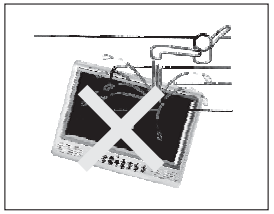

Keep the TV set away from water or damp environment.

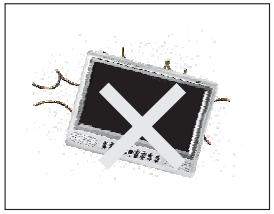

Never expose the TV set to moisture,dust oil or smoke.

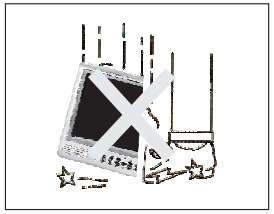

Avoid dropping or exposing to impacts.

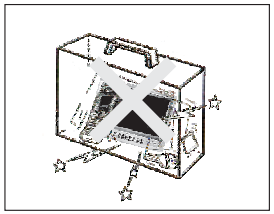

Never put this machine in containers that are unstable as this may cause damage.

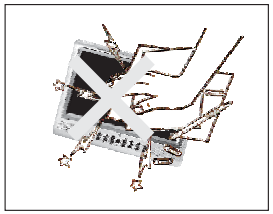

Never extrude or chafe this machine with sharp objects.

Maintenance

Please unplug all connection wires before start cleaning this machine.

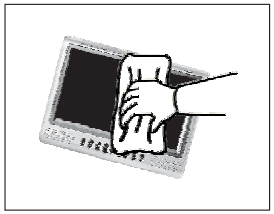

Please wipe the display screen and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.

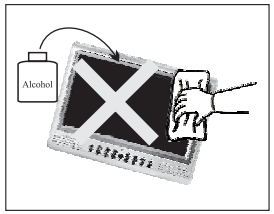

Never wipe this machine with abrasive cloth, detergent powder, alcohol and benzene etc. various propellants or chemical cleaning products.

Operation Precautions

1.Only the attached AC adaptor and the car adaptor are suitable.

2.For the sake of safety, when you do not intend to use the display, please switch off the AC adaptor or car adaptor.

Earphone Operation Precautions

1.Please do not tune your headphone / earphone at high volumes, otherwise, it may lead to ear damage.

2.For open-designed earphone, to avoid annoying those close by, please tune down the volume.

3.In case of any tinnitus, please turn down the volume or stop using this machine.

4.It is recommended by aurists that the earphones should not be used continuously for a prolonged period.

⚠ Warning

For the sake of safety for yourself and others, please do not watch the TV while driving.

⚠ Special Notice

A few highlights or dark spots may appear on the LCD screen. It is a very common phenomenon of active matrix display technology, and does not mean any defects or faults. Never try to repair this machine by yourself. In case of any fault or failure, please turn off the display at once, and notify our Company or the corresponding dealer. The display is made up of many precision electronic components. Any disassembly or modification may lead to further damage.

2. Accessories

AC/DC adaptor

Car adaptor

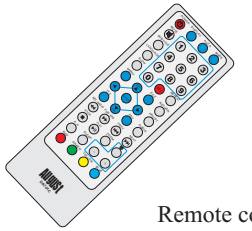
Remote control

Digital TV antenna

Base support

Double-sided adhesive pad for base support

AV cable

User manual

3. Part Names and Functions

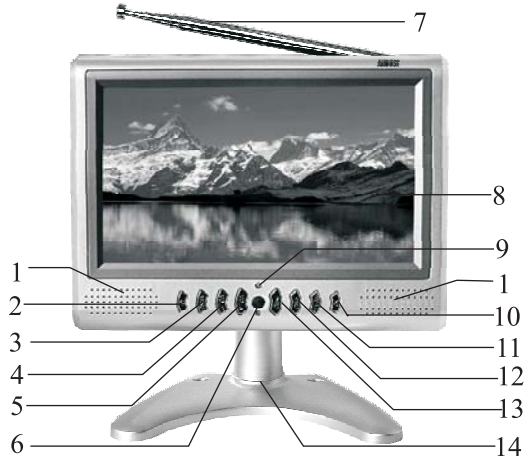

1. Stereo speakers
2. Power switch
3. Menu
4. Volume - / Left
5. Volume + / Right
6. Remote receiver
7. Telescopic antenna
8. TFT LCD screen
9. Power indicator
   Standby: Red
   Turn on: Green
10. OK confirm
11. TV/AV shift
12. Channel -/ Down
13. Channel +/ Up
14. Base support

15. Antenna input jack
16. USB jack
17. AV OUT
18. SD/MMC/MS port
19. Earphone jack
20. + 9V DC IN jack
21. Power ON/OFF switch
22. Charge indicator

Panel Button Functions

This table explains the functions of the buttons on the panel in each mode:

	Panel Button	DVB-T	Card & USB	ATV
①	POWER	POWER	POWER	POWER
②	OK	OK	OK	OK
③	TV/AV	MODE	MODE	MODE
④	VOL−/◀	VOL−	VOL−	VOL−/◀
⑤	VOL+/▶	VOL+	VOL+	VOL+/▶
⑥	MENU	MENU	MENU	MENU
⑦	CH−/▼	CH−/▼	▼	CH−/▼
⑧	CH+/▲	CH+/▲	▲	CH+/▲

4. Remote Control

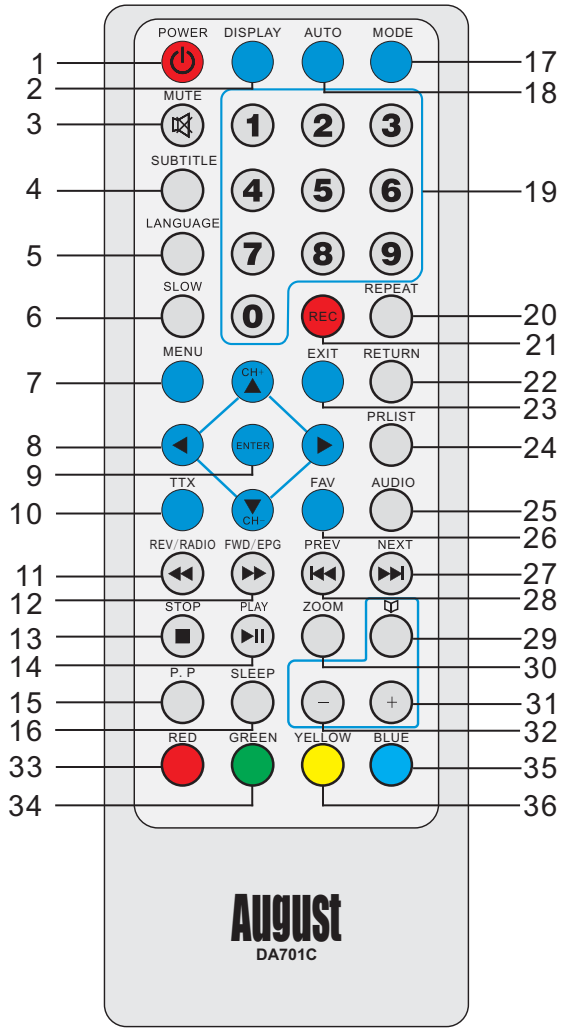

1. POWER
2. DISPLAY
3. MUTE
4. SUBTITLE
5. LANGUAGE
6. SLOW
7. MENU
8. LEFT/RIGHT/UP/DOWN
9. ENTER
10. TTX
11. REV/RADIO
12. FWD/EPG
13. STOP
14. PLAY
15. P. P
16. SLEEP
17. MODE
18. AUTO
19. NUMBER
20. REPEAT
21. REC
22. RETURN
23. EXIT
24. PRLIST
25. AUDIO
26. FAV
27. NEXT
28. PREV
29. 🕮
30. ZOOM
31. VOL+
32. VOL−
33. RED
34. GREEN
35. BLUE
36. YELLOW

Remote Control Functions

This table explains the functions of the buttons on the remote control in each mode:

	Remote button	DVB	Card & USB	ATV
1	POWER	POWER	POWER	POWER
2	DISPLAY	DISPLAY	DISPLAY	DISPLAY
3	MUTE	MUTE	MUTE	MUTE
4	SUBTITLE	SUBTITLE	SUBTITLE	
5	LANGUAGE	LANGUAGE		LANGUAGE
6	SLOW		SLOW (video only)	
7	MENU	MENU	MENU	MENU
8	◄	◄	◄	◄
8	►	►	►	►
8	▲	▲	▲	▲
8	▼	▼	▼	▼
9	ENTER	ENTER	ENTER	
10	TTX	TELETEXT		
11	REV/RADIO	RADIO	REV	
12	FWD/EPG	EPG	FWD	
13	STOP		STOP	
14	PLAY	PLAY	PLAY	
15	P. P	P. P	P. P	P. P
16	SLEEP	SLEEP	SLEEP	SLEEP
17	MODE	MODE	MODE	MODE
18	AUTO	AUTO		AUTO
19	NUMBER (0~9)	NUMBER (0~9)	NUMBER (0~9)	NUMBER (0~9)
20	REPEAT		REPEAT	
21	REC	REC		
22	RETURN	RETURN		RETURN
23	EXIT	EXIT	EXIT	
24	PRLIST	PRLIST		
25	AUDIO	AUDIO	AUDIO	
26	FAV	FAV		
27	NEXT		NEXT	
28	PREV		PREV	
29	🕮	🕮	🕮	🕮
30	ZOOM	ZOOM	ZOOM	
31	VOL+	VOL+	VOL+	VOL+
32	VOL−	VOL−	VOL−	VOL−
33	RED	RED		
34	GREEN	GREEN		
35	BLUE	BLUE		
36	YELLOW	YELLOW		

5. Connections

5.1. Installing the base support

Unscrew the oval handle on the ball-joint, it will split into halves, embrace them on the top of the base support, then tighten the oval handle. Slide the metal surface of the ball-joint into the slot on the back of the TV, then tighten the wheel screw.

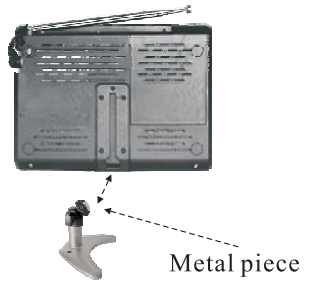

5.2. Connecting the power supply

Insert the power supply plug on the AC adapter to the jack on the TV marked DC IN +9V.

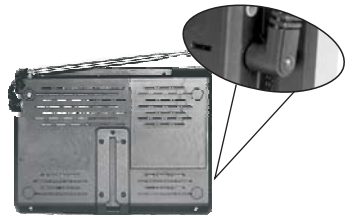

5.3. Connecting the earphones

Insert the earphone plug to the jack on the TV marked earphones.

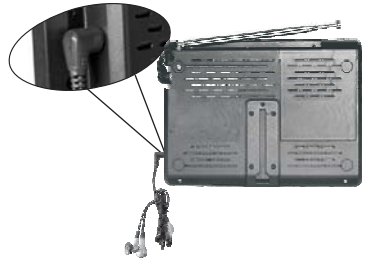

⚠ Notice

If earphones are used, sound is only transmitted through the earphones, and no sound is available from the stereo speakers of the TV.

5.4. Connection of AV Output

Connect the yellow port of the AV cable to video jack, the white port to the left audio jack and the red port to the right audio jack, then insert the AV head into the AV output jack on the TV.

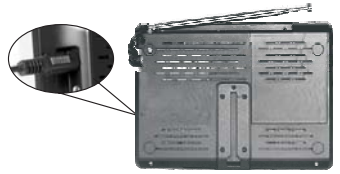

⚠ Notice

The AV output function is only available in DVB-T and Media player mode.

6. Digital Freeview TV (DVB-T)

When in Digital TV mode, press MENU and select Digital TV, it gives the following options: Channel Manager, Installation, Configuration, Software Upgrade, Factory Default, and Version Information.

6.1 Channel Manager

Channel Manager allows the user to sort, edit, delete, and classify the channels.

In Digital TV mode, select Channel Manager, press ENTER for the submenus.

6.1.1 Channel Organizer

Channel organizer is used to set favourite channels, change channel positions, lock and delete channels, and edit channel's name.

1. Channel Organizer can be accessed by selecting MENU -> Digital TV -> Channel Manager -> Channel Organizer.

2. If there is no channel saved on the TV, Channel Organizer can not be accessed, and it will show “Channel not available”.

3. Use UP/DOWN to select the channel you want to edit.
   - Press RED to select or cancel a favourite.
   - Press GREEN to delete or undelete a channel.
   - Press YELLOW to set or cancel a channel's position change.
   - Press BLUE to lock or unlock a channel, it will ask you to enter the password, the system default password is 0000.

4. To change the channel name, use UP/DOWN to select the channel line, press LEFT/RIGHT to enter the page to change the name, press RED/GREEN /YELLOW/BLUE to edit the name.

5. Press EXIT or MENU to exit Channel Organizer.

6.1.2 Channel Sorting

It allows the user to sort the channels by area, alphabetically or by number sequence.

1. Channel Sorting can be accessed by selecting MENU-> Digital TV-> Channel Manager->Channel Sorting.

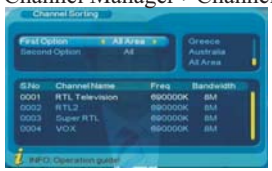

2. If there is no channel saved on the TV, Channel Sorting can not be accessed, and it will show “Channel not available”.

3. Press UP/DOWN to select:

①First Option: Area, press RIGHT to enter the area list, use UP/DOWN to select, press ENTER to confirm.

②Second Option: Sorting rules, press RIGHT to enter the rule list, use UP /DOWN to select, press ENTER to confirm.

4. Sorting rules can be selected by pressing RIGHT/UP/DOWN/LEFT.

5. After sorting rules is selected, press ENTER to confirm, it will ask “Are you sure?”, select “Yes” to confirm and to proceed the sorting, or select “No” to cancel.

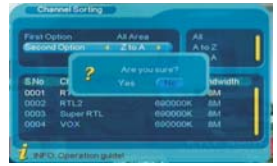

6. Press EXIT or MENU to exit Channel Organizer.

6.1.3 Channel Grouping

It allows the user to sort channels into 8 different categories: News, Science, Sports, Movie, Kids, Music, Fashion and None.

1. Channel Sorting can be accessed by selecting MENU-> Digital TV-> Channel Manager->Channel Grouping.

2. If there is no channel saved on the TV, Channel Grouping can not be accessed, and it will show “Channel not available”.

3. Use UP/DOWN to select the channel, and then select the category by pressing the numbers (1-8).

4. After setting, press EXIT, it will show “Successfully updated”.

6.1.4 Edit Channels

It allows the user to add and edit channels.

1. Edit Channels can be accessed by selecting MENU-> Digital TV-> Channel Manager-> Edit Channels.

2. If there is no channel saved on the TV, Edit Channels can not be accessed, and it will show “Channel not available”.

3. To add a new channel, press RED, and then press UP/DOWN to select between the 6 parameters as shown:

①Area Name: press RIGHT to enter the area list, use UP/DOWN to select, press ENTER to confirm.

②Carrier: press RIGHT to enter the carrier list, use UP/DOWN to select, press ENTER to confirm.

③Channel Name: press RIGHT to enter the edit page, use RED/GREEN /YELLOW/BLUE to edit, press ENTER to confirm.

④Audio PID: can be changed by pressing the numbers.

⑤Video PID: can be changed by pressing the numbers.

⑥PCR PID: can be changed by pressing the numbers.

⑦Once finish the settings, press ENTER to confirm, it will show “Successfully updated” and return to Edit Channels.

⑧During setup, press EXIT at any time to cancel and exit to Edit Channels.

5. To edit a channel, press YELLOW, and then press UP/DOWN to select between the 4 parameters as shown:

①Channel Name: press RIGHT to enter the edit page, use RED/GREEN/ YELLOW/BLUE to edit, press ENTER to confirm.

②Audio PID: can be changed by pressing the numbers.

③Video PID: can be changed by pressing the numbers.

④PCR PID: can be changed by pressing the numbers.

⑤Once finish the settings, press ENTER to confirm, it will show “Successfully updated” and return to Edit Channels.

⑥During setup, press EXIT at any time to cancel and exit to Edit Channels.

6.1.5 Delete All

To delete all the TV and Radio channels, select MENU-> Digital TV-> Channel Manager-> Delete All.

1. It will ask you to enter the password, the default one is 0000. After entering the correct password, it allows you to select to delete all TV channels or Radio channels.
2. Use UP/DOWN to select TV channels, it will ask “ Delete all TV channels?”, select “Yes” to confirm and proceed the delete, select “No” to cancel.
3. Use UP/DOWN to select Radio channels, it will ask “ Delete all Radio channels?”, select “Yes” to confirm and proceed the delete, select “No” to cancel.

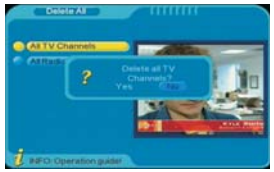

6.2 Installation

Installation is for searching TV and Radio channels, it can be accessed by selecting MENU-> Digital TV-> Installation.

Pressing ENTER, it gives two search options: Auto Search and Manual Search.

6.2.1 Auto Search

Select Auto Search, press ENTER, it will start the search.

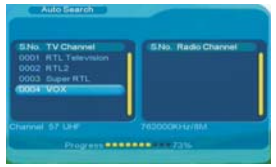

After searching, the system will automatically exit the searching page, save program information and return to Installation menu, press EXIT or MENU to exit.

6.2.2 Manual Search

If you know a channel's broadcasting frequency and bandwidth, using manual search to find the channel can be quicker.

Select Manual Search, press ENTER, it will ask you to provide two parameters:

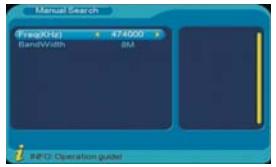

①Freq (KHz): scanning frequency, the default is 474000 KHz, use numbers or LEFT/RIGHT to change.

②Band Width: use LEFT/RIGHT to select.

After setting, press ENTER to start the search. After searching, the system will automatically exit the searching page, save program information and return to Installation menu, press EXIT or MENU to exit.

6.3 Configuration

Configuration menu has the following options: On Screen Display, TV, System Setup, Time, Wakeup Timer and Parental Lock. It can be accessed by selecting MENU->Digital TV->Configuration.

6.3.1 OSD (On Screen Display)

Through OSD, you can set the interface pattern.

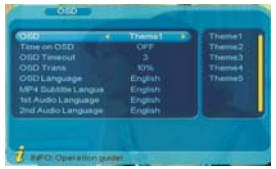

Left of the menu lists all the options under OSD. Press UP/DOWN to select an option.

1. OSD: supports 5 menu patterns, press LEFT/RIGHT to select between Theme1-5.
2. OSD Timeout: sets the display time of an information dialog window, press LEFT/RIGHT to select between 1-6 seconds, the system default is 3seconds.
3. OSD Trans: sets the diaphaneity of the menu, press LEFT/RIGHT to adjust from 0%-60%.
4. OSD Language: the system supports multi-language user interface, press RIGHT to enter the language list, use UP/DOWN to select, press ENTER to confirm.

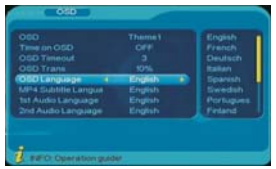

5. 1st Audio Language: press RIGHT to enter Audio Language list, use UP/DOWN to select, press ENTER to confirm.
6. 2nd Audio Language: press RIGHT to enter Audio Language list, use UP/DOWN to select, press ENTER to confirm.
7. After setting, press ENTER confirm, press EXIT or MENU to exit the setup, it will show “Successfully updated”.

6.3.2 TV

This option allows the users to set their preferred TV output settings.

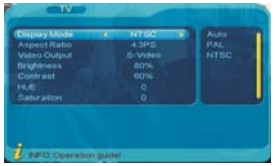

Left of the menu lists all the options. Press UP/DOWN to select an option.

1. Display Mode: press LEFT/RIGHT to select between AUTO, PAL, & SECAM, press ENTER to confirm and exit the setting. Or press UP/DOWN to select another option.
2. Aspect Ratio: press LEFT/RIGHT to select between 16:9, 4:3 Pan Scan, 4:3 Letter Box, press ENTER to confirm and exit the setting. Or press UP/DOWN to select another option.
3. Video Output: press LEFT/RIGHT to select between S-Video and CVBS, press ENTER to confirm and exit the setting. Or press UP/DOWN to select another option.
4. Brightness: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

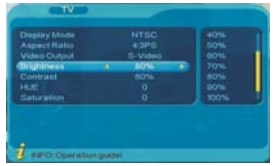

5. Contrast: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

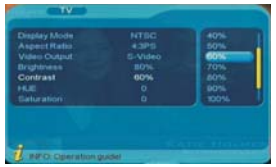

6. HUE: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

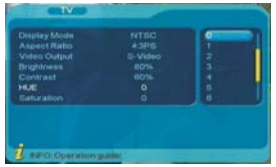

7. Saturation: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP /DOWN to select another option.

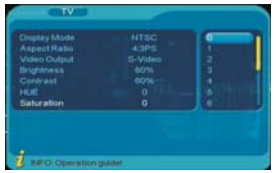

8. After setting, press ENTER, EXIT or MENU to exit the setup, it will show “Successfully updated”.

6.3.3 System Setup

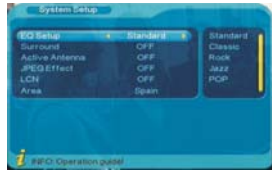

Press UP/DOWN to select an option, use LEFT/RIGHT to change the settings.
After setting, press ENTER, EXIT or MENU to exit the setup, it will show “Successfully updated”.

6.3.4 Time

You can set Timer Mode, Date, Time, GMT Offset, and Summer Time under Time menu. There are two Timer modes, one is Auto, and one is Manual.

The system default is Auto timer mode, press UP/DOWN to select Timer Mode or GMT Offset, use RIGHT/LIFT to change.

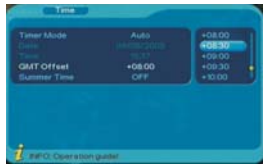

In Manual timer mode, press UP/DOWN to select an option, use RIGHT/LEFT or numbers to change the Date, Time, GMT Offset or Summer Time.

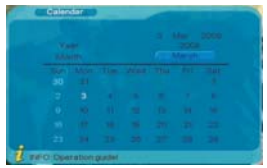

Press ENTER to confirm, press EXIT or MENU to exit the setup, it will show “Successfully updated”.

6.3.5 Wakeup Timer

This option allows you to switch off / on the device automatically, set a scheduled time recording, or set a reminder for the program you do not want to miss.

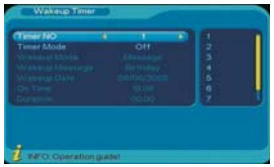

You can set Timer Mode, Wakeup Mode, Wakeup Message, Wakeup Channel, Wakeup Date, Time, Duration and Partition.

1. Timer No.: the number of this Wakeup Timer setting, use LEFT/RIGHT to change.
2. Timer Mode: use LEFT/RIGHT to select between Once, Daily, Weekly, Yearly or Off.

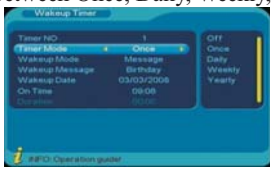

3. Wakeup Mode: use LEFT/RIGHT to choose to show a message, switch to a channel you want to watch, switch off/on the device or set a scheduled TV recording.

Please note the device can only be switched on automatically through Wakeup Timer, after it was switched off through the Wakeup Timer last time. The device can also be set to switch On/Off automatically through the timer function in Analogue TV mode, for further details please refer to page 21-22.

① Wakeup Message: use LEFT/RIGHT to select between Birthday, Anniversary or General.

② Wakeup Channel: use LEFT/RIGHT to select a channel from the channel list.

4. Wakeup Date: press RIGHT to enter the Calendar, use UP/DOWN/LEFT/RIGHT to select a date.

5. On Time: use numbers to set the starting time.

6. Duration: use numbers to set how long you want to watch or record the program.

7. Default Partition: this is for scheduled recording only, press RIGHT, it will show "Device List", if the TV connects to an USB stick, it only shows one device on the list, if the TV connects to an external hard drive which has number of partitions, it will show the partition list, select the appropriate, press ENTER, it will ask to confirm whether to change, if you want to change, select "Yes" then press ENTER, otherwise select "No". It will show "Set successfully".

After setting, press ENTER to confirm, press MENU to exit the setup, it will show "Successfully updated".

6.3.6 Parental Lock

User can change system password under this option.

Enter the old password, if it is correct, the cursor will move to Enter New Password option, enter and confirm the new password. The system will show "Password changed".

The system default password is 0000.

6.4. Software Upgrade

This function is for manufacturer use only.

6.5 Factory Default

To restore the system configuration to factory default, press MENU, selectDigital TV-> Factory Default, press ENTER.

It will ask whether you want to perform the factory default, select [No] to cancel or select [Yes] to confirm.

6.6 Version

This provides the hardware, software and system information.

7. Digital TV Recording

The device supports recording Freeview TV to an USB memory stick or external hard drive (FAT32, USB2.0) via the USB port.

Before starting the recording, connect an USB stick or external hard drive, which has sufficient space left, to the device first.

7.1 Real Time TV Recording

Press REC on the remote to start the recording, it will show "REC" on the screen, press "REC" again to stop the recording, it will ask "Do you want to stop recording", choose "Yes" to stop or "No" to carry on recording.

Press YELLOW during the recording, it allows you to set how long you would like the record to last, press RIGHT to choose: 15 min, 30 min, 45 min, 60 min, 75 min, 90 min, 105 min, 120 min or disable, press ENTER to confirm and exit.

Press DISPLAY during the recording, it will show how long the record has been on, the name of the channel, and how many space has left on your USB stick or external hard disk, press DISPLAY again to exit.

The recorded program is saved in a new folder "PVR" in your USB stick or external hard driver and is in MPG video format. It can be viewed by pressing the GREEN shortcut button or pressing MENU then selecting Disk Manager.

Press MENU, then select Disk Manger, it shows all the recorded programs stored in your USB stick or external hard drive, press GREEN repeatedly to select Play/Delete One / Delete All/ Rename a recorded program, press ENTER to confirm, press MENU to exit at any time.

Press BLUE to select partitions on your external hard drive.

7.2 Scheduled TV Recording

To set up a recording schedule, please make sure the device is on digital Freeview TV mode first. Then press MENU, select Digital TV by pressing ENTER, select Configuration, and then select Wakeup Timer. It gives the following options:

1. Timer No.: the number of this Wakeup Timer setting, use LEFT or RIGHT to change.
2. Timer Mode: use LEFT or RIGHT to select between Once, Daily, Weekly, Yearly or Off.
3. Wakeup Mode: select Recorder for scheduled recording, for the use of other available functions in this setting, please refer to page 14.
4. Wakeup Channel: use LEFT or RIGHT to select the channel you want to record.
5. Wakeup Date: press RIGHT to enter the Calendar, use UP/DOWN/LEFT/ RIGHT to select a date you want to record the program.
6. On Time: use numbers to set the starting time of the recording.
7. Duration: use numbers to set how long you want the record to last.
8. Default Partition: press RIGHT, it will show "Device List", if the TV connects to an USB stick, it only shows one device on the list, if the TV connects to an external hard disk which has number of partitions, it will show the partition list, select the appropriate, press ENTER, it will ask to confirm whether to change, if you want to change, select "Yes" then press ENTER, otherwise select "No". It will show "Set successfully".
9. Press MENU to exit the setting, it will show "Successfully updated".

Please note the scheduled recording can only be activated when the device is ON and is in the Freeview TV mode.

When the recording starts, it will show "REC" on the screen, when it has finished, the "REC" will disappear. Press DISPLAY during the recording, it shows the progress of the recording, the name of the channel, and how many space has left on your USB stick or external hard disk, press DISPLAY again to exit.

The recorded program is saved in a new folder "PVR" in the USB stick or external hard driver

and is in MPG video format. It can be viewed pressing the GREEN shortcut button or pressing MENU then selecting Disk Manager.

Press MENU, then select Disk Manger, it shows all the recorded programs stored in your USB stick or external hard drive, press GREEN repeatedly to select Play/Delete One/ Delete All/ Rename a recorded program, press ENTER to confirm, press MENU to exit at any time.

Press BLUE to select partitions on your external hard drive.

8. Card Reader & USB Functions

This player has built-in SD/MMC/MS card reader and USB port. It supports the playback of MP3, JPEG and MPEG4 (AVI) files.

Insert a SD/MMC/MS card or an USB memory stick to the card slot or USB port on the player.

8.1 Movie

Press MENU, select Movie, press ENTER, the Movie menu will show:

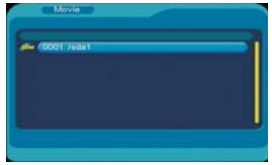

Use UP/DOWN to select a subtrack.

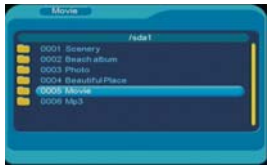

Press ENTER to view the video files in the subtrack.

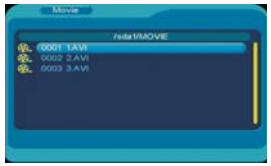

Use UP/DOWN to select a movie you want to watch, press ENTER to confirm.

Press PLAY/PAUSE to start, pause and resume the play.
Press FWD to search forward at 2, 4, 8 and 20 times of the normal speed.
Press REV to reverse at 2, 4, 8 and 20 times of the normal speed.
Press SLOW to start slow playback at 1/2 or 1/4 times of the normal speed.
Press PREV to play the previous movie, press NEXT for the next one.
Press REPEAT to choose Repeat Once, Repeat Directory, Repeat Shuffle, Repeat Off.
Press ZOOM to view the picture at 2, 3, 4, 1/2, 1/3, or 1/4 times of the normal view.
Press STOP and EXIT to exit the playback.

8.2 Music

Press MENU, select Music, press ENTER, the Music menu will show:

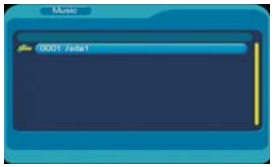

Use UP/DOWN to select a subtrack.

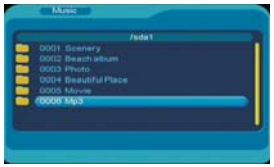

Press ENTER to view the music files in the subtrack.

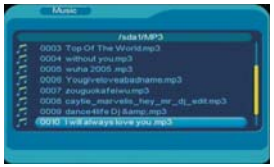

Use UP/DOWN to select a file you want to play, press ENTER to confirm.

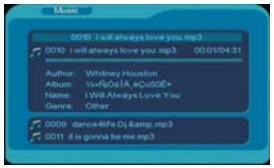

Press PLAY/PAUSE to start, pause and resume the play.
Press FWD to search forward at 2, 4, 8 or 20 times of the normal speed.
Press REV to reverse at 2, 4, 8 or 20 times of the normal speed.
Press PREV to play the previous music file, press NEXT for the next one.
Press REPEAT to choose Repeat Once, Repeat Directory, Repeat Shuffle, Repeat Off.
Press STOP and EXIT to exit the playback.

8.3 Photo

Press MENU, select Photo, press ENTER, the Photo menu will show:

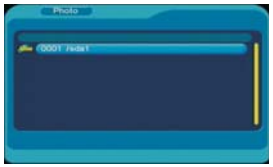

Use UP/DOWN to select a subtrack.

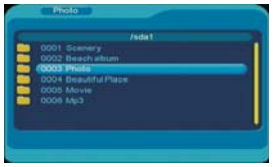

Press ENTER to view the photo files in the subtrack.

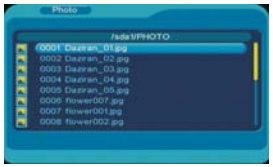

Use UP/DOWN to select a file you want to play, press ENTER to confirm.

Press PREV to play the previous photo, press NEXT for the next one.
Press RIGHT to rotate clockwise, press LEFT to rotate anticlockwise.
Press UP for mirror effect, press UP again to back to normal.
Press DOWN for upside down effect, press DOWN again to back to normal.
Press ZOOM to view the picture at 2, 3, 4, 1/2, 1/3, or 1/4 times of the normal view.
Press ENTER for photo slideshow, photos in the selected folder will show repeatedly.
Press STOP and EXIT to exit the playback.

9. Games

Games can be accessed by selecting Menu ->Game-> Native Games.

Press UP/DOWN to select the game you want to play, press ENTER to confirm.
The games are played using UP/DOWN /LEFT/RIGHT buttons. To exit the game, press ENTER to pause, and then select Exit Game.

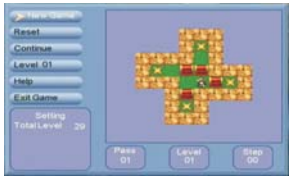

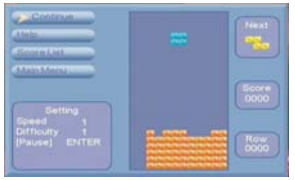

10. Screen Setting

Bright

Press 🕮 to enter Brightness menu.
Press + or - to adjust.

Contrast

Press 🕮 repeatedly to enter Contrast menu.
Press + or - to adjust.

Color

Press 🕮 repeatedly to enter Colour menu.
Press + or - to adjust.

Hue(Only in NTSC/SECAM mode)

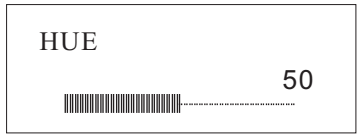

Press 🕮 repeatedly to enter Hue menu.
Press + or - to adjust.

Volume

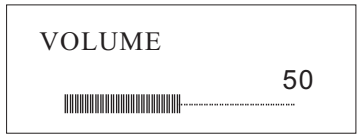

Press 🕮 repeatedly to enter Volume menu.
Press + or - to adjust.

Reset

Press 🕮 repeatedly to enter Reset menu.
Press + or - to reset the Brightness, Contrast, Colour, Hue and Volume settings to the default level 50.

11. Analogue TV

Press MODE on the remote control to switch to the Analogue TV mode.
Press MENU repeatedly, the following options will show:

PICTURE	VOLUME	OPTION
SYSTEM	PRESET	CLOCK

11.1. Picture

Press UP or DOWN to select between Brightness, Contrast, Colour, and Language settings.

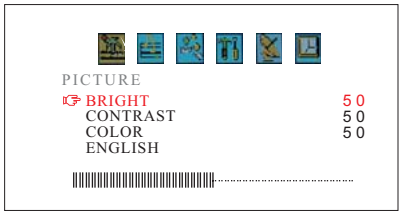

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

11.2. Volume

Press LEFT or RIGHT to change the volume setting.

▲ / ▼ Select ◄ / ► Adjust

11.3. Option

Press UP or DOWN to select between Zoom, Blue Background, Game, Calendar, picture up down and mirror effect settings.

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

11.4. System

Press UP or DOWN to select between Color-Sys, Sound-Sys, Swap and Copy settings.

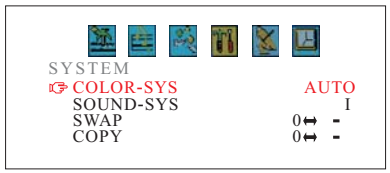

▲ / ▼ Select ◄ / ► Adjust

Color-Sys: Press LEFT or RIGHT to select between AUTO, PAL, and SECAM.
Sound-Sys : Press LEFT or RIGHT to select between I, L, BG, and DK.
UK customer please set the sound system to I.
Swap: Use LEFT, RIGHT, UP or DOWN to swap channel positions.
Copy: Use LEFT, RIGHT, UP or DOWN to copy and change channels.

■ 11.5. Preset

Press UP or DOWN to select between Auto Search, Search, Fine Tune, Band, Position and Skip settings.

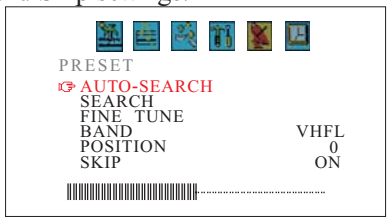

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

■ 11.6. Clock

Press UP or DOWN to select between Sleep, Time, Off-Time, and On-Time settings.

▲ / ▼ Select ◄ / ► Adjust

Sleep: The unit can be set to turn off automatically after certain time, press LEFT or RIGHT to select from 0 to up to 240 minutes maximum with 10 minutes intervals.

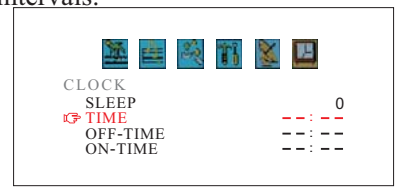

◄ :Adjust hour ►:Adjust minute ▲ / ▼ :Select items to be setup

Time: Press LEFT to change the hours, press RIGHT to change the minutes.
Off-Time: The unit can be set to turn off automatically, press LEFT to change the hours, press RIGHT to change the minutes.
On-Time: The unit can be set to turn on automatically, press LEFT to change the hours, press RIGHT to change the minutes.

⚠ Notice

1. Auto Search → Start from Program No .0.
2. When the signal is received under Manual Search, the indication frequency will stop, which is the optimum position for signal storage. If the signal is too weak, the system will automatically identify it as no signal.
3. In the case of a picture without sound, please check the Sound System for correct setup first.
4. If the input signal is not strong enough, please adjust “Fine” option, it may improve the picture and sound quality.

⚠ Caution

If the signal is too weak, the image will remain poor whatever you do, and may output loud noises, shaking images and inferior sound etc., which is not the TV's fault. If the image remains poor when using the telescopic antenna, please try to use a roof top aerial or an amplified external antenna.

12. Battery Charging

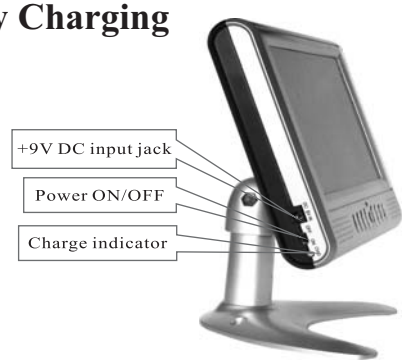

- This unit has a built-in rechargeable battery. Fully charge the battery before using the device for the first time.
- To run the unit off mains power and/or charge the battery, connect the supplied AC adaptor to the socket marked " +9V DC IN " and switch on the power at the wall.
- To run the unit off a car cigarette lighter, connect the car adaptor to the lighter socket and the socket marked " +9V DC IN " .
- The charge indicator (marked " CHG ") will turn red,indicating that the battery is charging.
- When the indicator turns green, the battery is full.
- To run the unit from the battery,make sure any power adaptors are disconnected.
- Fully charge the battery when it will not be used for an extended period of time.
- Switching off the device while charging the battery can shorten the charging time and extend the life of the battery.

⚠ Warning

1. Use only the supplied power adaptors with this device. Failure to do so can cause damage to the device and risk personal injury.
2. Do not attempt to repair or replace the battery by yourself, as this will invalidate the warranty. Any repairs must be carried by either the manufacturer or their nominated service centre. Parts inside this device are subject to high voltage.

13. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit.
Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture and no sound	Check the connection with the AC adaptor/Car adaptor. Use of an unauthorized power supply. Power switch on the side of the TV is off. TV is on standby as it was switched off by pressing the POWER on remote.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations. Ensure video settings are correct.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check that the cable is plugged in. Sound System is not correctly set in Analogue TV mode.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/No Colour	Please adjust the Colour Setting. Color-Sys is not correctly set in Analogue TV mode.

⚠ Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

⚠ Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

【☑ after some items in this manual means it is available with this function. 】

14. Specifications

LCD Display	Screen Size: 7 Inch Resolution: 480 x 234 pixels Aspect Ratio: 16:9 Brightness: 200 cd/m^2 Contrast: 150:1
DVB-T Decode Standard	MHEG5 MPEG2 ISO/IEC13818 MPEG2 MP@ML
DVB-T Band Width	6M, 7M ,8M
DVB-T Frequency	VHF: 177.5~226.5 MHz UHF: 474~858 MHz
Analogue TV Format	PAL-I , DK, BG SECAM-L, DK
Analogue TV Frequency	VHF: 48.25 ~ 160.25 MHz; 168.25 ~ 456.25 MHz UHF: 464.25~863.25 MHz
AV Out	CVBS Output: 1Vp-p/75ohm System: PAL, NTSC
Antenna Input	Impedance: 75ohm
Card Reader	Support SD, MMC,MS card
USB Port	USB 2.0 host, 5V/600mA
Built-in Speaker	2 x 1 W, 16 ohm
Battery	Lithium-ion rechargeable battery (2200mAh, 7.4V)
Power Adaptor	AC 100~240V 50~60 Hz DC 9V/1.5A
Power Consumption	< 10 W
Video Format	MPG, DAT, VOB, AVI (MPEG-1,2,4)
Audio Format	MP3, WAV
Photo Format	JPEG
Dimensions	191x143x27.5mm
Net Weight	586g

Note:

Design and specifications of this device are subject to change without notice.

Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product return.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1. A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August product should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

2. Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is strong and there may be difficulty to receive Freeview TV signal by the included portable antennas in some areas where the signal is not sufficiently strong. This is due to that the Freeview service in the UK is yet fully operating. August TVs should not be deemed as faulty if it can receive Freeview by connected to a proper rooftop aerial.

Customer Service:

Telephone: +44 (0) 845 250 0586
Email: service@augustint.com